



DETAIL A  
EXPLODED VIEW

NOTE:  
IF THE BUILDING HAS AN MR-24 ROOF, INSTALL TRIM CLIPS TO CABLE ANGLE BEFORE INSTALLING V-STRAPS. V-STRAPS MAY RUN OVER TRIM CLIP FASTENER.

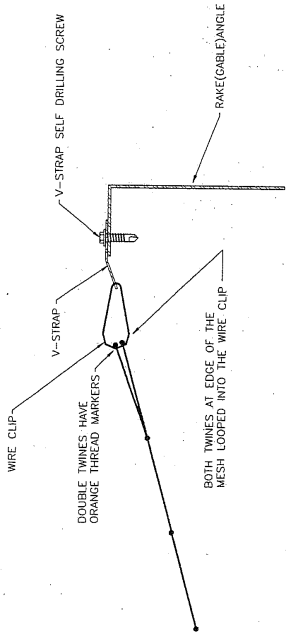

SECTION A-A  
TYPICAL AT ENDWALL

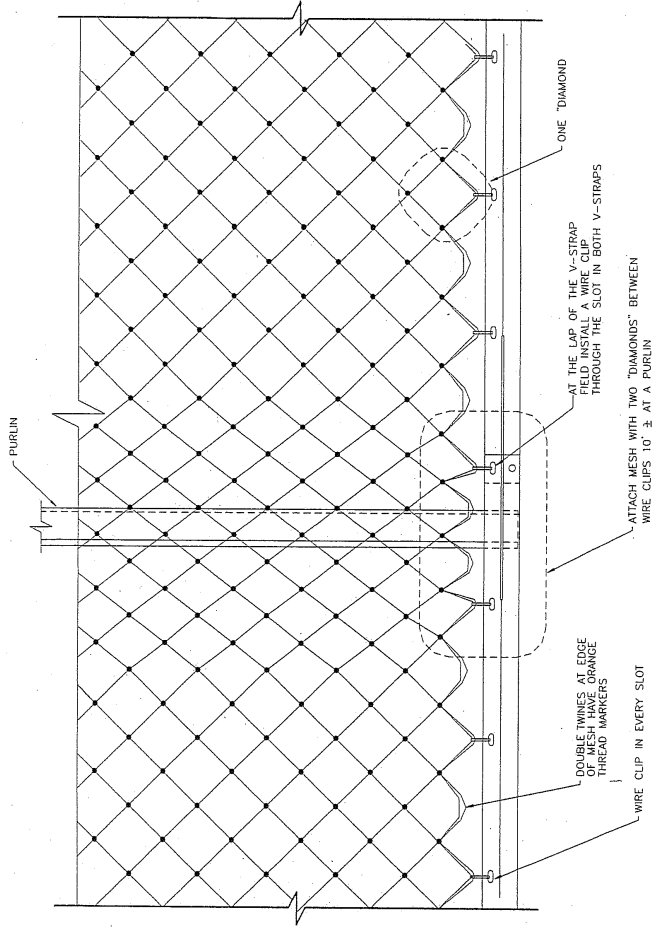


DETAIL B  
TYPICAL PLAN VIEW AT ENDWALL

- STEPS:
1. VERIFY THAT THE TWINES AT THE EDGE OF THE MESH TO BE INSTALLED AT THE ENDWALL HAVE ORANGE THREAD MARKERS.
  2. LOOP THE MESH INTO THE WIRE CLIP AT EVERY OTHER "DIAMOND", EXCEPT AS SHOWN IN DETAIL B.
  3. MAKE SURE BOTH TWINES AT THE EDGE ARE LOOPED INTO THE WIRE CLIP.
  4. SEE DETAIL A FOR AN EXPLODED VIEW OF THE V-STRAP CONNECTION.

NOTE: USE THIS DRAWING ONLY IF INSULATION IS THICKER THAN 8"  
(USE DRAWING 1081346 IF INSULATION IS 8" THICK OR LESS)

DATE	07/12/05	DRAWN	CHD	REV.	01-019-01	GROUP	1081000	REV.	00
FIRST RELEASE									


  
 American Institute of Steel Construction, Inc.

for Design & Fabrication

THIS PRINT SUBJECT TO CHANGE WITHOUT NOTICE.  
 FOR BUILDING ERECTION ALWAYS USE THE PRINTS  
 RECEIVED WITH THE BUILDING SHIPMENT.

DRAWING NUMBER	1081000	REVISION	01-019-01	DATE	07/12/05
SKY-WEB II		ENDWALL DETAILS		ALL BUILDINGS	
B 1081000 00					